

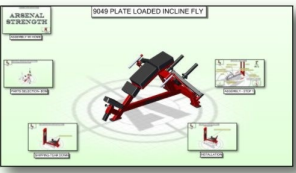


# 9049 | INSTALLTION INSTRUCTIONS

1. INSTALL (3) FOOTPADS.

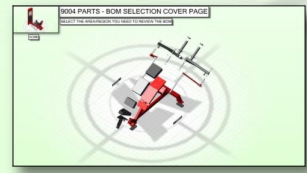

HOME

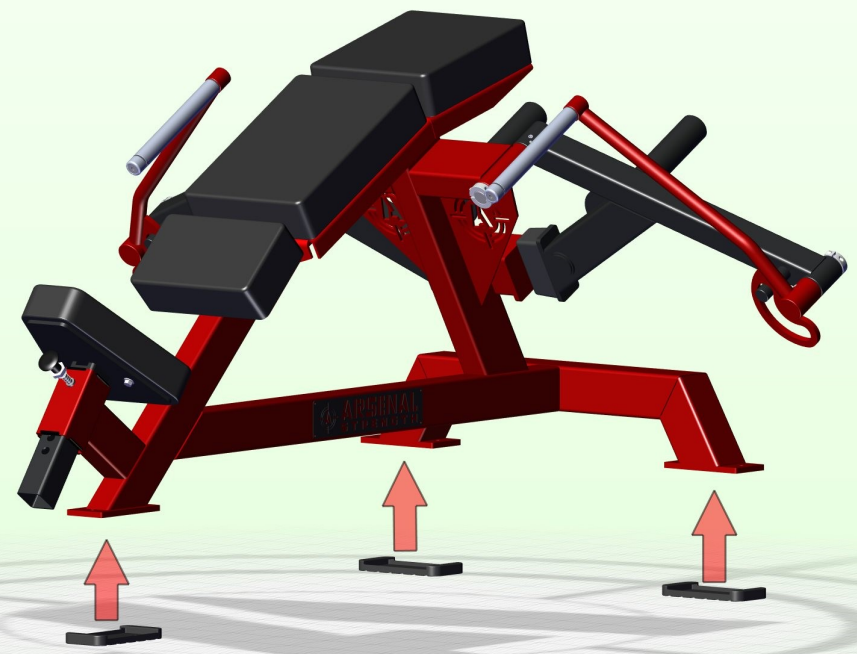

PARTS SELECTION