9065 BELT SQUAT INSTALLATION INSTRUCTIONS-OP1

1. REMOVE ALL SARAN WRAP AND SHIPPING BRACKETS. RETAIN FASTENERS. INSTALL ANY FOOTPADS.
2. WITH THE FOOTPADS INSTALLED, UNLOCK LEVELING BACK FOOT JAM NUT AND ADJUST FOOT UNTIL CONTACT IS MADE. RE-TIGHTEN JAM NUT.
3. ENSURE WEIGHT HORN ORIENTATION IS END UP FOR RETAINING WEIGHTS. STARTING WITH THE TOP BOLT, EA ASSY .50-13X1.5 BHCS BOLT THRU WEIGHT HORN ASSY, THRU FRAME, WASHER AND THIN NYLOCK NUT, (2 EA ASSY), (2 TOTAL ASSY). TIGHTEN ALL.

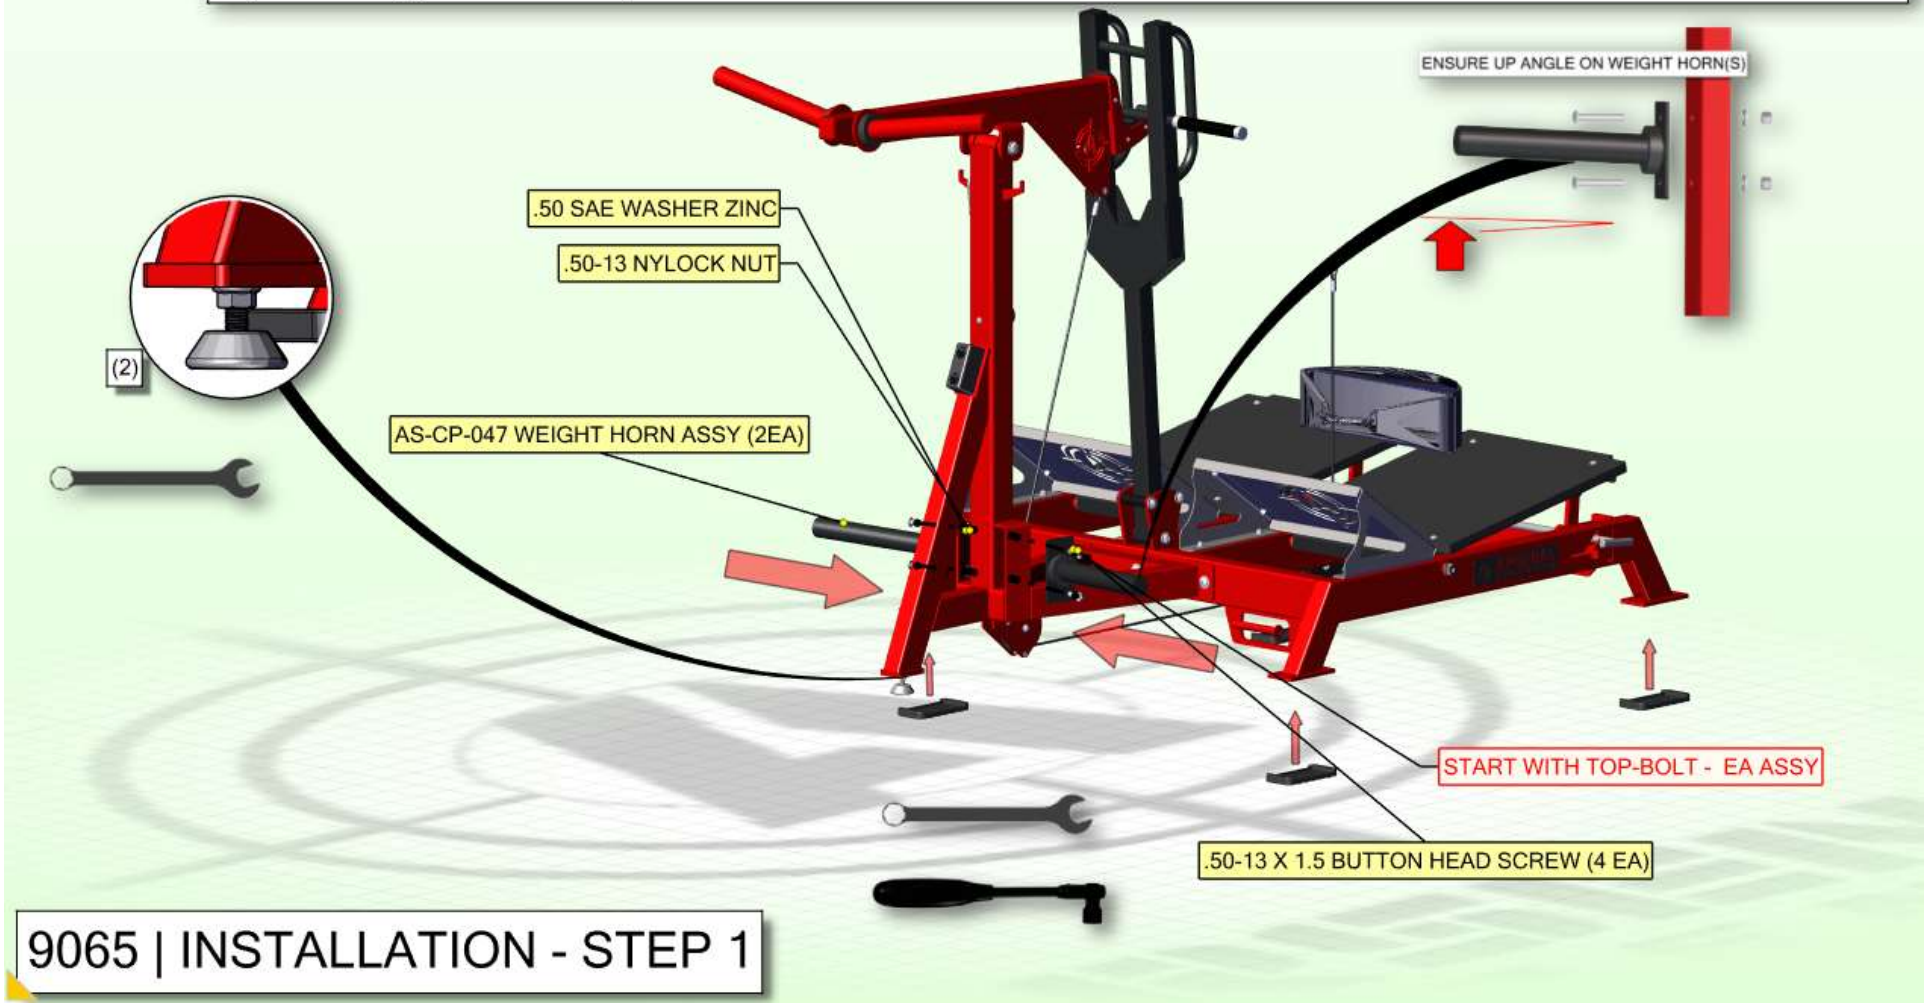

9065 | INSTALLATION - STEP 1